

Double-throttle check valves from the Parker Manapak series FM are in sandwich design for easy configuration of stack systems. Throttle and check valves are located in ports A and B.




FM2 and FM3 can be used as meter-in or meter-out throttle by changing the mounting position.

FM4 can be selected by ordering code as meter-in or meter-out throttle. FM6 is only available as meter-out control.

The throttle check valve can also be used to influence the switching time of pilot operated directional valves. In this case, the valve is positioned between the pilot stage (CETOP 03, NG06) and the main stage (CETOP 05, NG10 up to CETOP 10, NG32).

Features

- Two types of metering needle design can be selected when ordering FM2 and FM3 valves to achieve the throttle characteristics required to suit the application.
- Large bypass check valves allow high flow at low pressure drop.
- NG06 - FM2 (CETOP 03)
- NG10 - FM3 (CETOP 05)
- NG16 - FM4 (CETOP 07)
- NG25 - FM6 (CETOP 08)

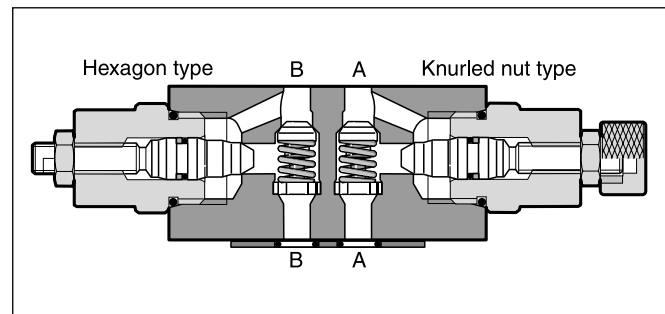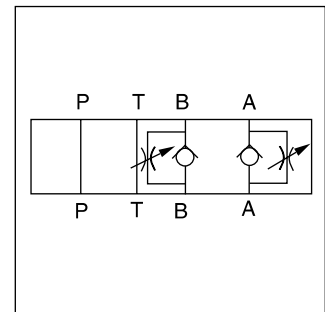
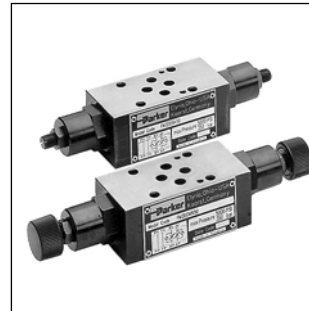


Technical data


General					
Series		FM2	FM3	FM4	FM6
Size		NG06	NG10	NG16	NG25
Mounting interface		NFPA D03 CETOP 03	NFPA D05 CETOP 05	NFPA D07 CETOP07	NFPA D08 CETOP 08
Mounting position		unrestricted			
Ambient temperature [°C]		-20...+60			
MTTF _D value [years]		150			
Weight [kg]		1.3	2.4	5.4	7.9
Hydraulic					
Max. operating pressure [bar]		350	350	350	210
Max. Flow [l/min]		53	76	200	341
Opening pressure [bar]		0.3	0.3	0.3	0.3
Meter-in throttle		•	•	•	—
Meter-out throttle		•	•	•	•
Fluid		Hydraulic oil according to DIN 51524			
Fluid temperature [°C]		-20...+70			
Viscosity	permitted	[cSt] / [mm²/s]	20...400		
	recommended	[cSt] / [mm²/s]	30...80		
Filtration		ISO 4406 (1999); 18/16/13			

Throttle Check Valve Series FM

Ordering Code

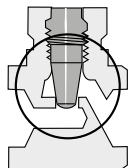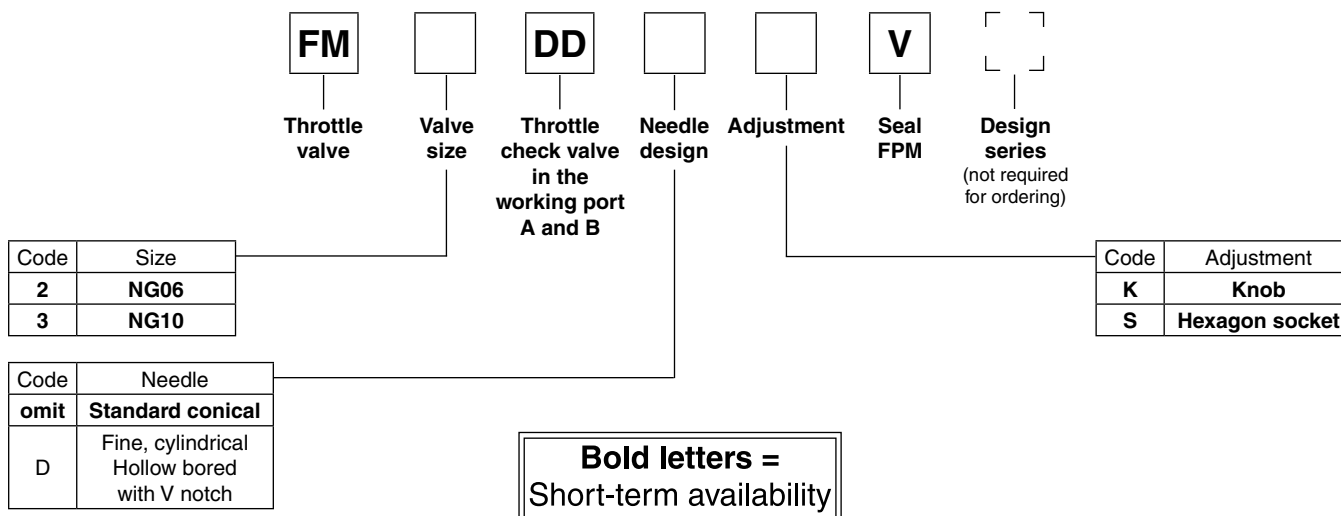


A two-stage needle provides fine adjustment in the lower flow range with 3 adjustment rotations. After 3 more rotations, the valve is completely open.

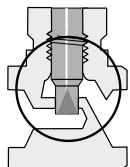


Design "D"

A cylindrical needle with a V notch allows the fine adjustment over the entire setting range.

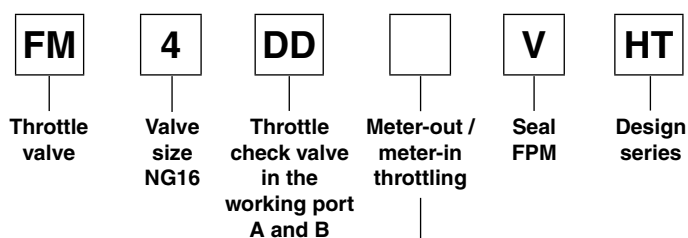


Code	Description
T	Meter-in
F	Meter-out

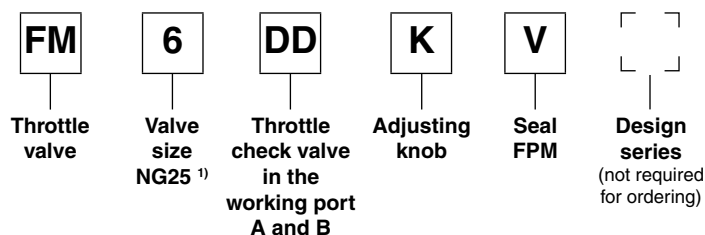


¹⁾ Only meter-out available.


FM2 standard needle

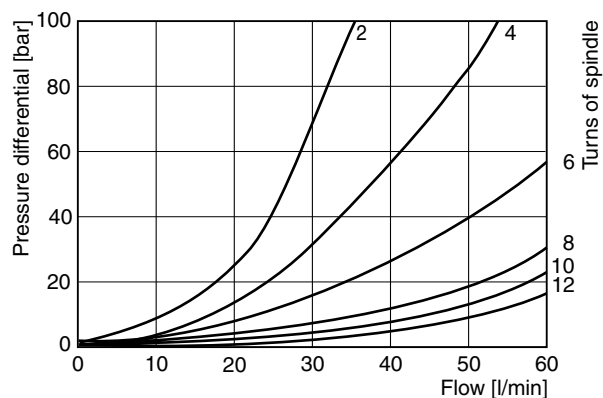


FM2D needle with V notch

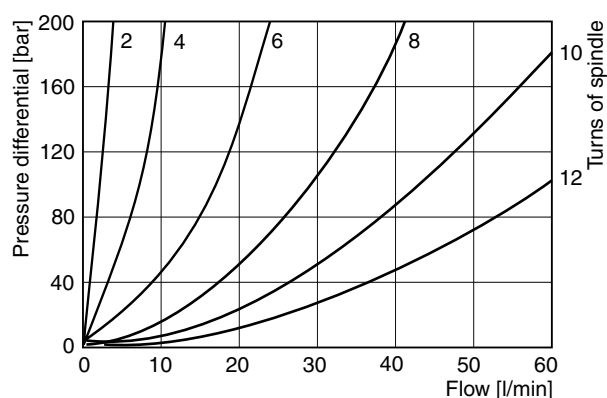


FM2 flow, check valve

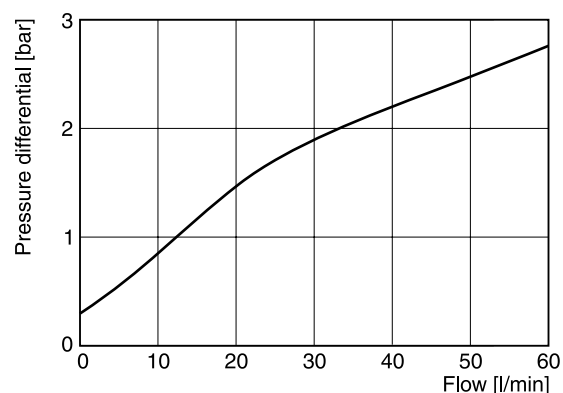


FM3 standard needle

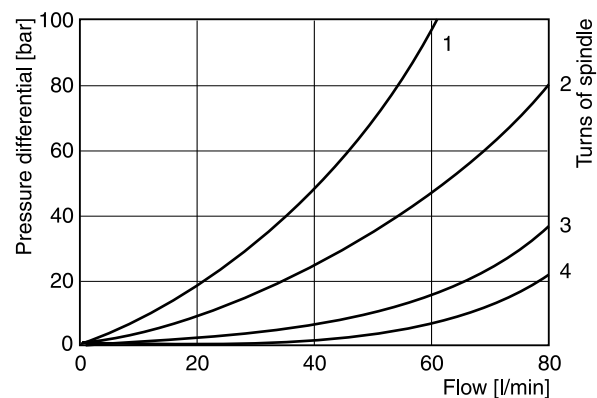

FM3D needle with V notch

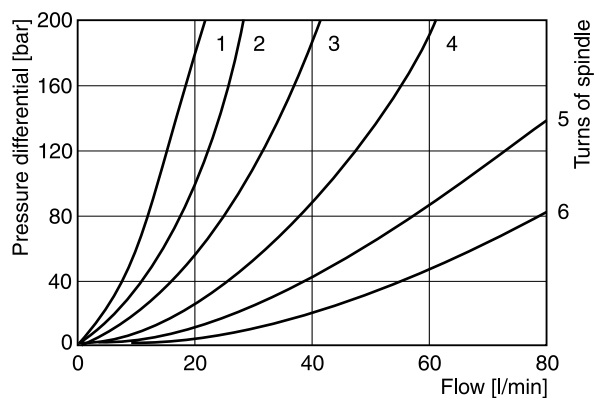


FM3 flow, check valve

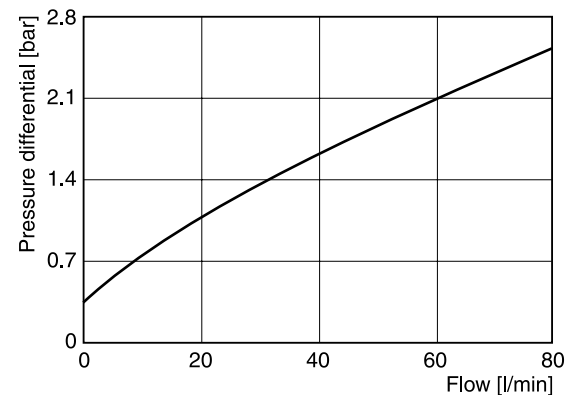


All characteristic curves measured with HLP46 at 50 °C.

FM4 with standard needle

1 to 5 number of needle rotations

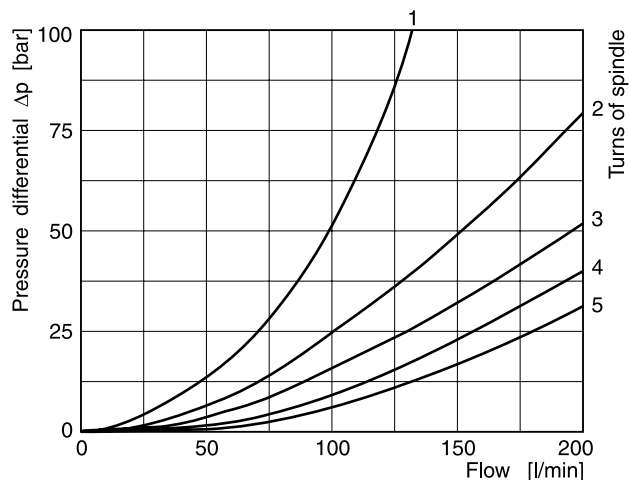


FM4 flow, check valve

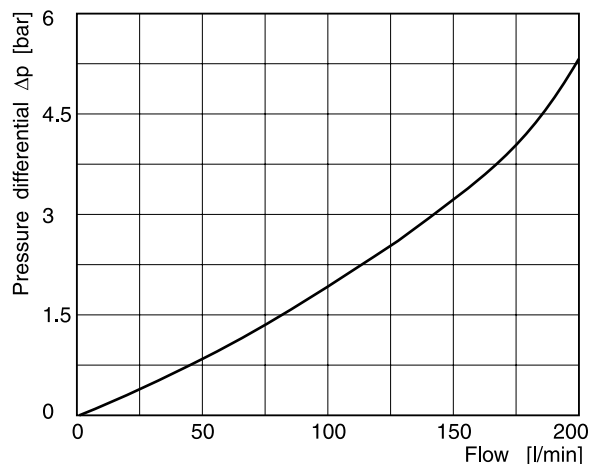


7

FM6 with standard needle


1 to 5 number of needle rotations

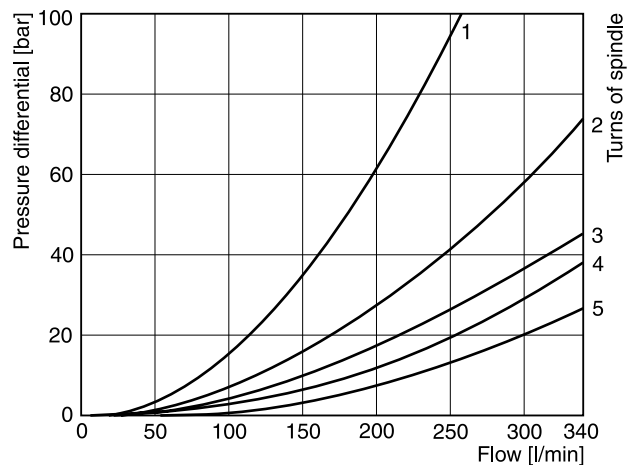






FM6 flow, check valve

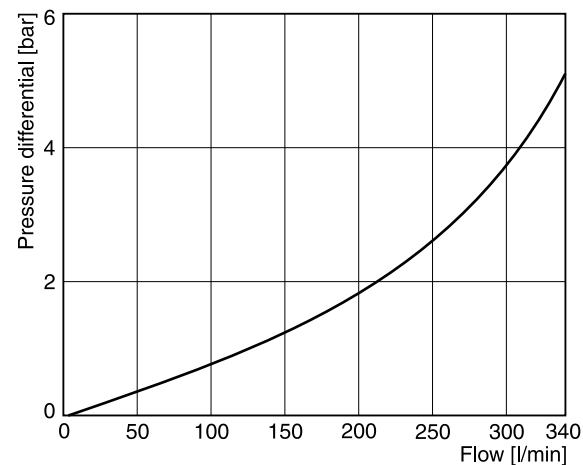


All characteristic curves measured with HLP46 at 50 °C.

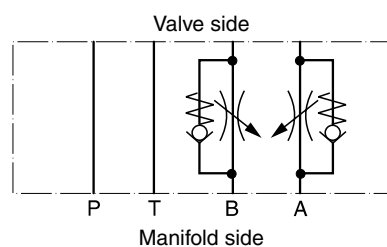Dimensions**FM2****Adjustment code K****Meter-in****Meter-in or meter-out**

A functional change is achieved by rotating the mounting position of the valve 180° about the longitudinal axis (A-B).

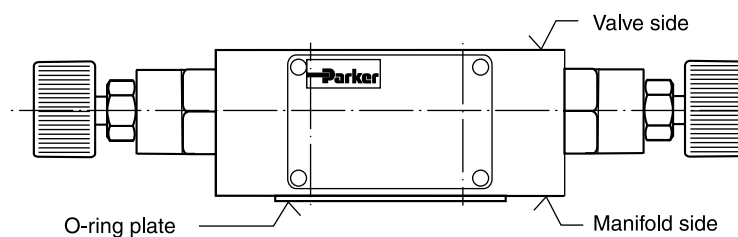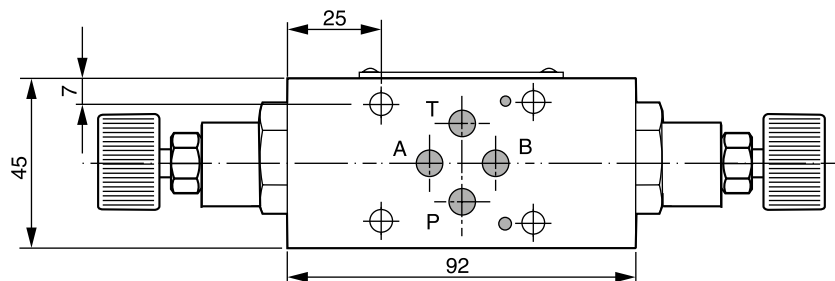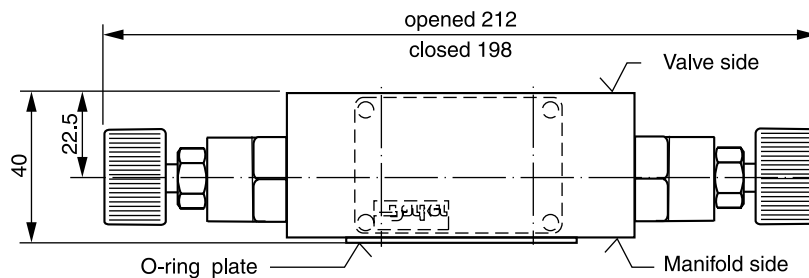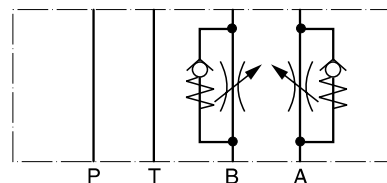**Meter-out****Adjustment code S**



(Meter-out shown)

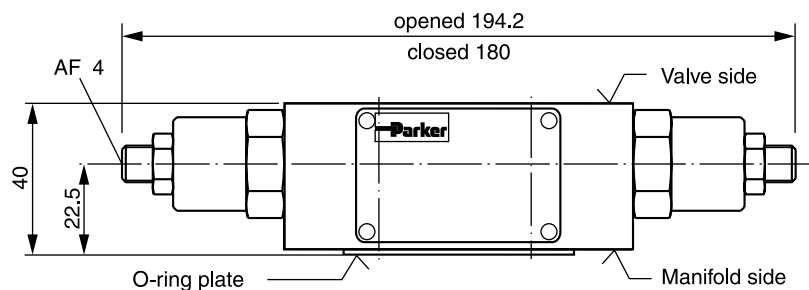





Seal kit FM2	
Seal	Order code
V	SK-FM2-V-20

Note:

The O-ring plate (with O-rings) for sealing the connecting surface of the manifold side is included. The O-ring plate is always mounted on the manifold side.

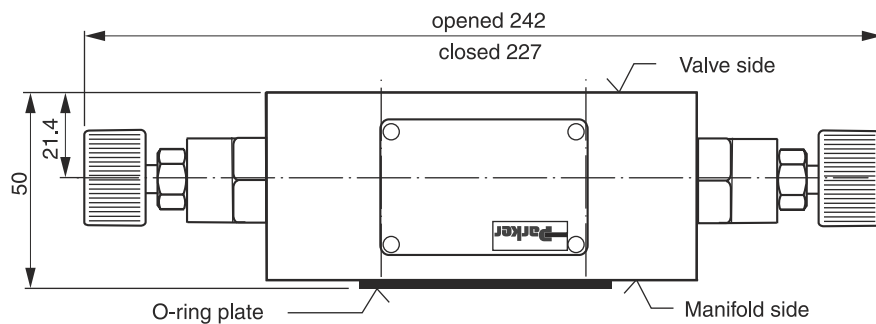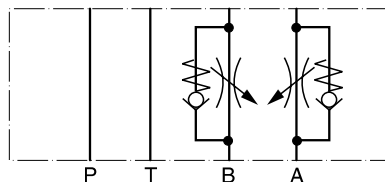Dimensions**FM3****Adjustment code K****Meter-in****Meter-in or meter-out**




A functional change is achieved by rotating the mounting position of the valve 180° about the transverse axis (P).

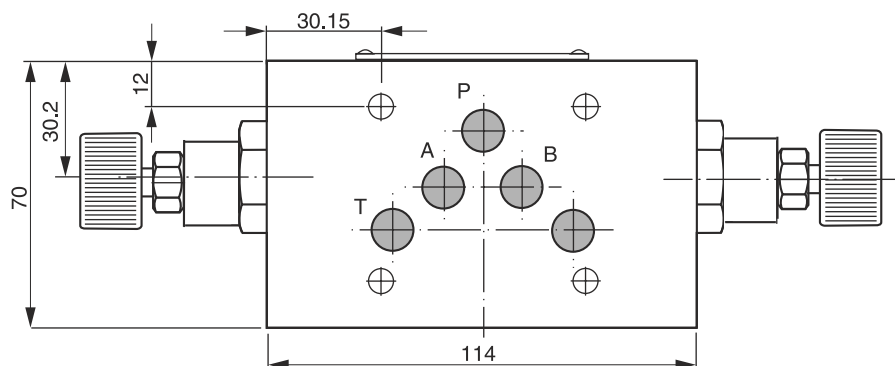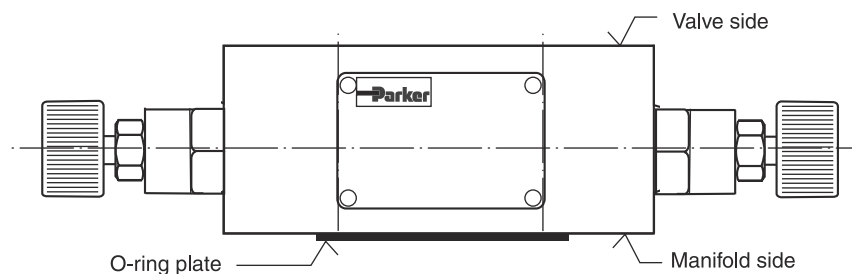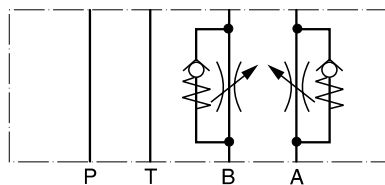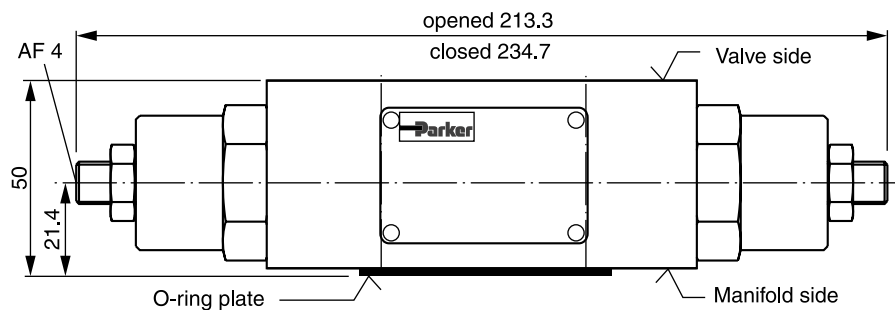**Meter-out****Adjustment code S**
(Meter-out shown)

Seal kit FM3	
Seal	Order code
V	SK-FM3-V-20

Note:


The O-ring plate (with O-rings) for sealing the connecting surface of the manifold side is included. The O-ring plate is always mounted on the manifold side.

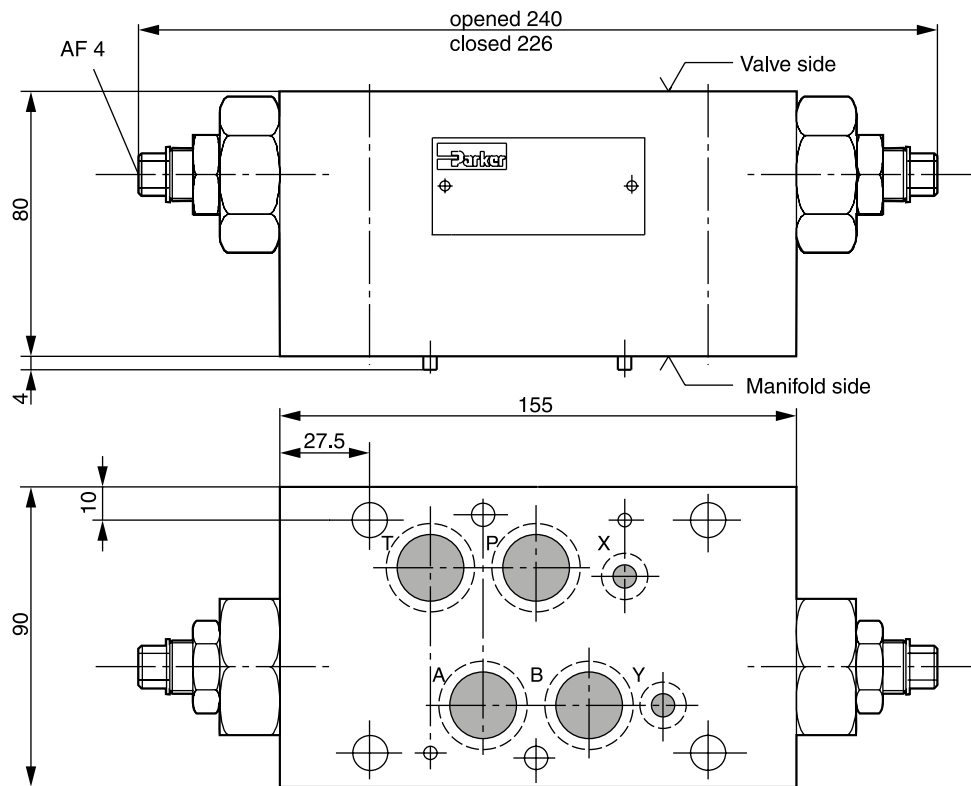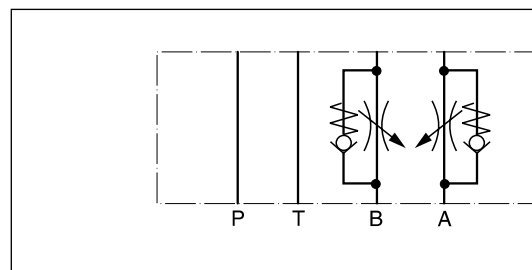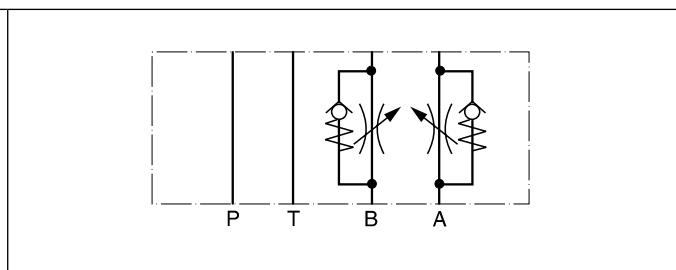FM4**Meter-in****Meter-out****Seal kit FM4**

Seal	Order code
V	SK-FM4VHT

Dimensions


FM6

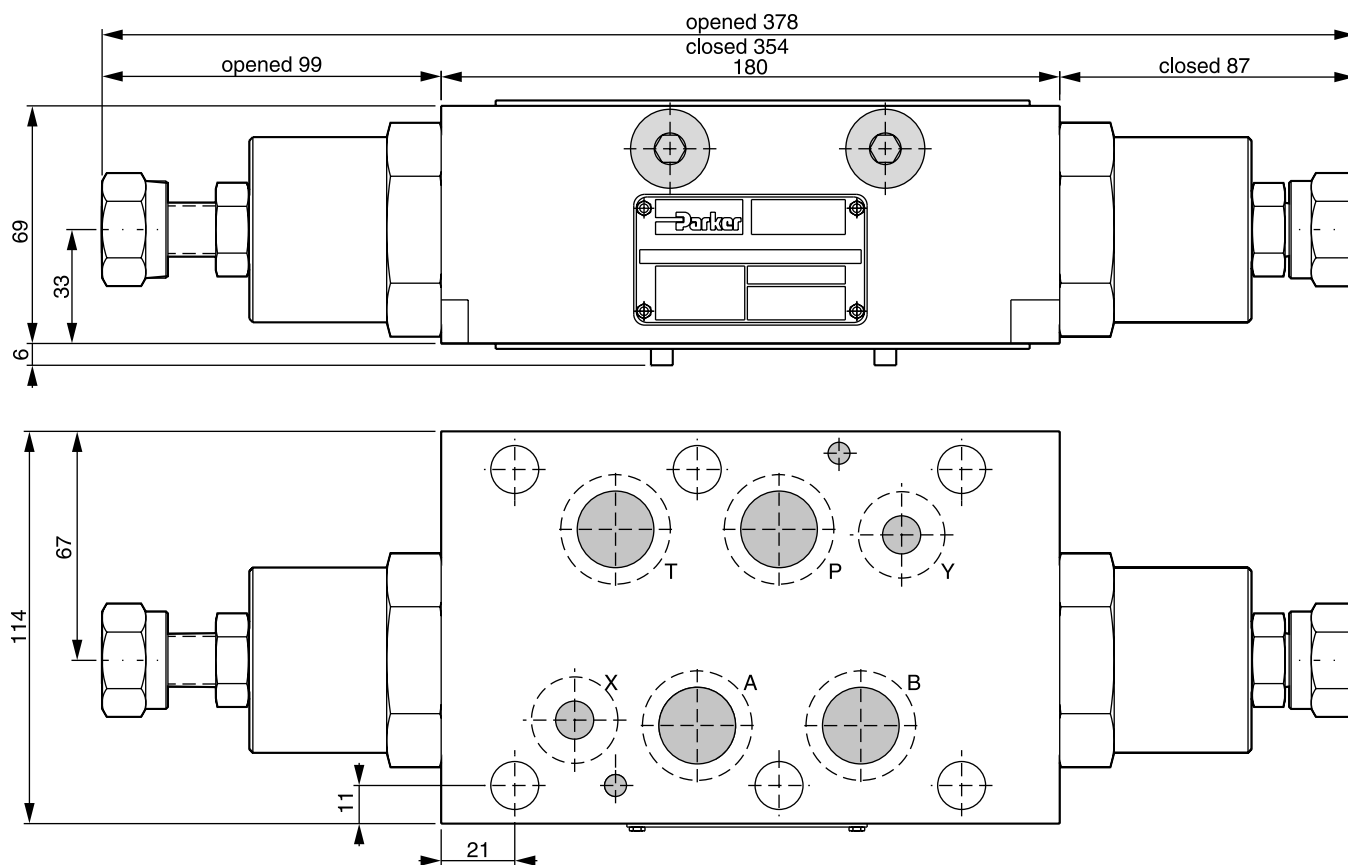

Meter-out

Adjustment: knob

Meter-in is not available for FM6

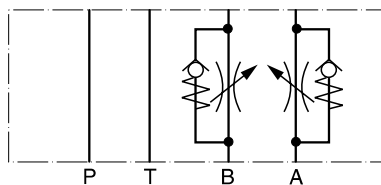

Seal kit FM6

Seal	Order code
V	SK-FM6-V-12